

210*285mm



Operation & Care Instructions

Save For Future Reference

Model: EFP1002 **All purpose**

floor machine

Assembly Instructions:

1. Use a Phillips screwdriver to remove the screw from the plastic handle. Slide metal tube into the plastic handle, align the holes, reinstall and tighten the screw. (see illustration 1).
2. Locate the other metal handle tube and slip the end with one hole over the plastic handle connector on the finished handle assembly. Make sure the locking pin protrudes through the hole in the side of the lower tube. (see illustration 2).
3. Remove the screw from the black painted yoke, and insert the metal handle tube into the yoke. Reinstall the screw, and tighten (see illustration 3).


Operating Instructions:

1. To start machine, step on handle release pedal and lower handle to activate the twin nylon brushes.
2. To clean hard floors, place the microfiber pads on the floor and twin nylon brushes, or place the microfiber pads on the floor and set the machine on them. The weight of the machine will hold the microfiber pads in place. Spray any household surface cleaner on a small area of the floor and immediately run the machine over the area. When one side of the pad becomes dirty, flip the pad over and use the opposite side. When both sides of the pad are dirty, they can be rinsed in a pail or sink or placed in a laundry machine.
3. To polish wood floors, Attach felt discs to the twin nylon brushes using the plastic retaining clips. Snap the retaining clip through the center of the felt disc onto the shaft to securely retain the brushes using the plastic retaining clips. Snap the retaining clip through the center of the felt disc onto the shaft to securely retain the felt disc.
4. To remove spots and stains from carpets, spray a small section of the carpet with a household "spot & stain" remover. Using the twin nylon brushes, agitate the spot or stain until it is removed.
5. To clean high traffic zones and large areas of spots & stains on carpets, Attach felt discs to the twin nylon brushes using the plastic retaining clips. Snap the retaining clip through the center of the felt disc onto the shaft to securely retain the green carpet bonnet over the felt disc. Spray carpet lightly with a household "spot & stain" remover to clean. Rinse or clean carpet bonnets as needed.


Technical Information:
Voltage: ~~220V~~ 230V, Frequency: 50 HZ Power Requirement: 180W, Speed: 400r/m

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

1. Never carry the machine by the cord, or pull on the cord to disconnect the machine from an outlet; instead grasp the plug, and pull to disconnect.
2. Keep cord away from heated surfaces. Do not pull cord around sharp edges or corners. Do not close door on the cord.
3. Do not contact moving parts. Do not use outdoors.
4. Do not leave appliance unattended, when plugged in. Unplug from outlet when not in use, and before servicing.

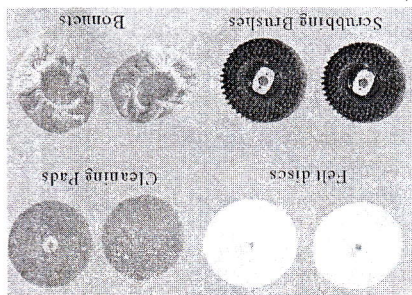

MICROFIBER PADS

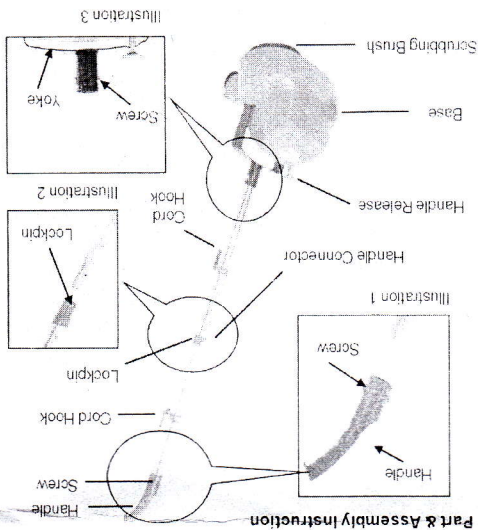

Part & Assembly Instruction

5. Do not handle plug or appliance with wet hands.
6. Follow all label, and marking instructions.
7. Do not allow product to be used by children. Close attention is needed when product is used near children.
8. Do not use with damaged cord, or plug. If appliance is not working as it should, has been dropped, damaged, or dropped into water, take it to an authorized service center.
9. Do not use with, or near flammable liquids.
10. Do not store appliance near hot ovens or heating appliances.
11. Use only as described in this manual. Use only manufacturer's recommended attachments. Do not use for any purpose other than described in this user's guide.
12. Make sure the appliance is connected to the correct voltage.
13. Do not attempt to repair this product yourself. If the product needs repair, take it to an authorized service center.
14. Do not submerge the appliance in water, or other liquid. Do not place, or store the appliance where it can fall, or be pulled into a tub, sink, or other vessel containing liquid. Do not wash the machine.
15. If the machine is in need of repair, do not attempt to repair it yourself. Take the machine to an authorized service center.
16. If using the machine to polish floor wax. Make sure the wax is completely dry before polishing.
17. This machine is equipped with a thermal limiting device, to protect the motor from excessive temperature. If the machine suddenly stops operating, unplug the machine, and allow it to cool. If the appliance is left plugged in, it could start unexpectedly when the motor cools.